

SUN2000-60KTL-M0 Quick Guide (Europe Edition)

Issue: 01
Part Number: 91509499
Date: 2018-02-10

HUAWEI TECHNOLOGIES CO., LTD.




! NOTICE

- The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.
- Before installing the device, carefully read the user manual to get familiar with product information and precautions.
- Only qualified and trained electrical technicians are allowed to operate the device. Operators should understand the components and functioning of a grid-tied PV power system, and they should be familiar with relevant local standards.
- Before installing the device, check that package contents are intact and complete against the packing list. If any damage is found or any component is missing, contact the dealer.
- Use insulated tools when installing the device. For personal safety, wear proper personal protective equipment (PPE).
- Huawei shall not be liable for any consequence caused by violation of the storage, moving, installation, and operation regulations specified in this document and the user manual.

1 Product Overview

Front View

- (1) PV connection indicator
- (2) Grid-tied indicator
- (3) Communication indicator
- (4) Alarm/Maintenance indicator
- (5) Maintenance compartment door
- (6) Host panel cover

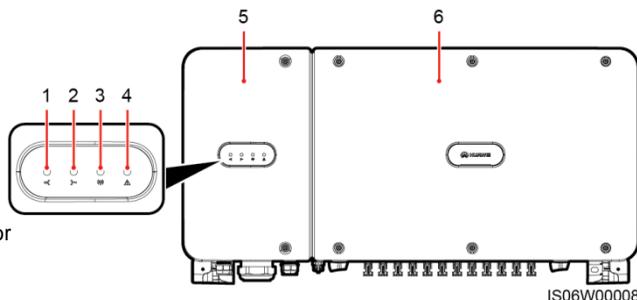


Indicator Description

Indicator	Status	Description
	PV string connection status	Steady green At least one PV string is properly connected, and the DC input voltage of the corresponding MPPT circuit is higher than or equal to 200 V.
		Off The SUN2000 disconnects from all PV strings, or the DC input voltage of each MPPT circuit is less than 200 V.
	Steady green The SUN2000 has connected to the power grid.	
	Off The SUN2000 does not connect to the power grid.	
	Blinking green The SUN2000 receives data over RS485 or PLC communication.	
	Off The SUN2000 has not received data over RS485 or PLC communication for 10 seconds.	


Indicator	Status	Description	
Alarm/Maintenance indicator 	Alarm status	Blinking red at long intervals (on for 1s and then off for 4s)	A warning alarm is generated.
		Blinking red at short intervals (on for 0.5s and then off for 0.5s)	A minor alarm is generated.
		Steady red	A major alarm is generated.
	Local maintenance status	Blinking green at long intervals (on for 1s and then off for 1s)	Local maintenance is in progress.
		Blinking green at short intervals (on for 0.125s and then off for 0.125s)	Local maintenance fails.
		Steady green	Local maintenance succeeds.

Ports

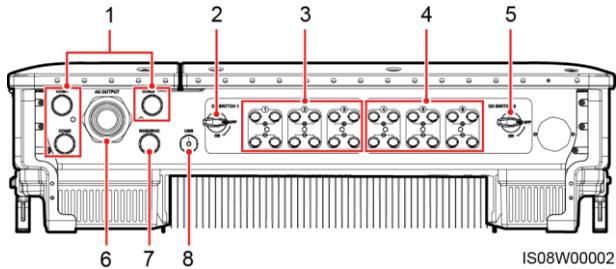


- | | |
|--|--|
| (1) Cable gland (COM1, COM2, and COM3) | (2) DC switch 1 (DC SWITCH 1) |
| (3) DC input terminals (controlled by DC SWITCH 1) | (4) DC input terminals (controlled by DC SWITCH 2) |
| (5) DC switch 2 (DC SWITCH 2) | (6) Cable gland (AC OUTPUT) |
| (7) Cable gland (RESERVE) | (8) USB port (USB) |

SUN2000 Dimensions

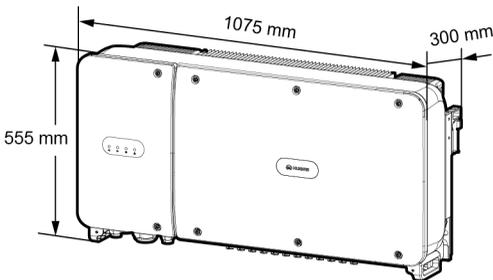


Mounting Bracket Dimensions

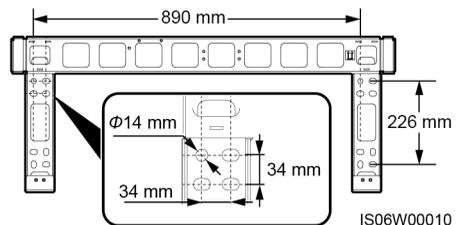


2 Installation Requirements

2.1 Installation Angle

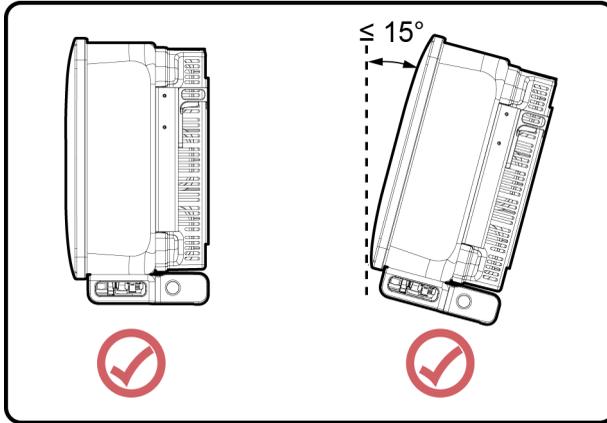

IS06W00011

2.2 Installation Space

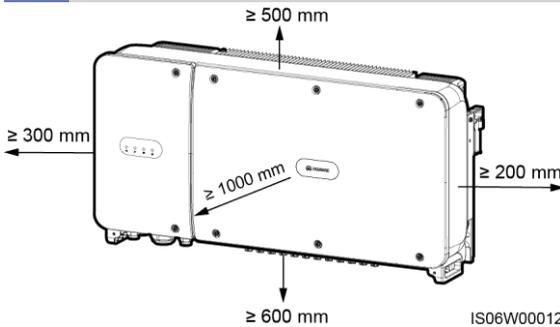

IS06W00012


NOTE

For ease of installing the SUN2000 on the mounting bracket, connecting cables to the bottom of the SUN2000, and maintaining the SUN2000 in future, it is recommended that the bottom clearance be between 600 mm and 730 mm.


3 Installing the SUN2000

NOTE

- The SUN2000 mounting bracket has four groups of tapped holes, each group containing four tapped holes. Mark any hole in each group based on site requirements and mark four holes in total. Two round holes are preferred.
- M12x40 bolt assemblies are supplied with the SUN2000. If the bolt length does not meet the installation requirements, prepare M12 bolt assemblies by yourself and use them together with the supplied M12 nuts.
- The following describes how to install the SUN2000 by using support installation as an example. For details about wall-mounted installation, see the user manual.
- Save the security torx wrench for later use after removing it from the mounting bracket.

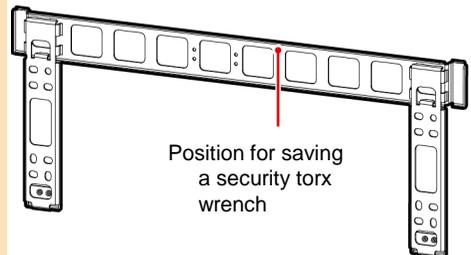

IS06H00045

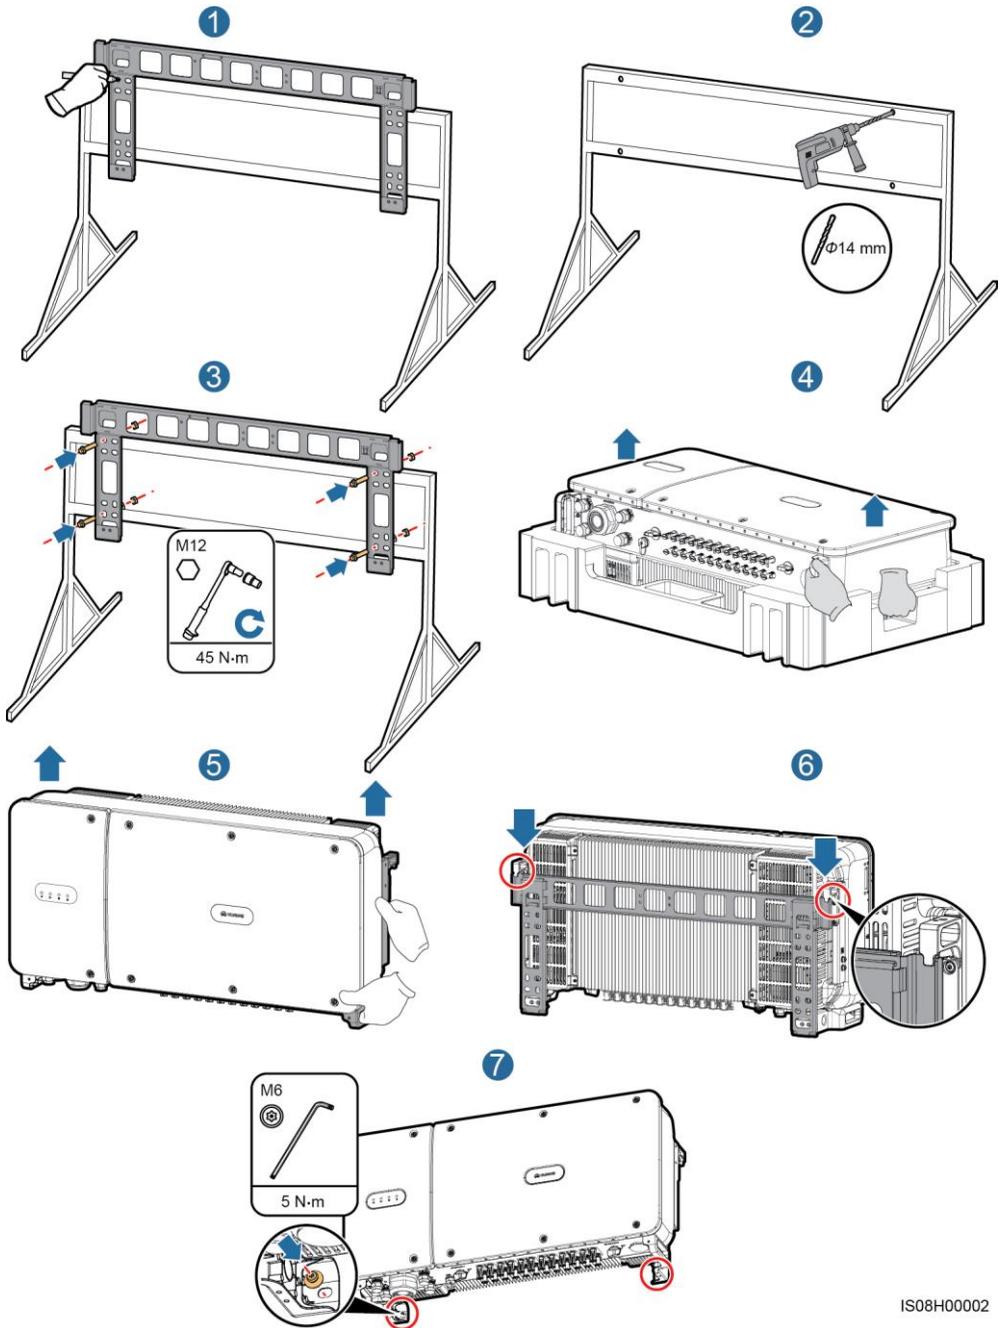

IS08H00002



NOTE

You are advised to apply anti-rust paint on the hole positions for protection.

4 Installing Cables

4.1 Installation Preparations

NOTE


- Before installing cables, ensure that all required OT terminals and cables are prepared.
- The following table lists only recommended cable specifications. For more cable specifications, see the user manual.

No.	Name	Model/ Specifications	Description
1	Ground cable	16 mm ² outdoor copper cable	<ul style="list-style-type: none">• If you choose the ground point on the enclosure for connecting a ground cable, prepare the ground cable.• If you choose the ground point in the maintenance compartment for connecting a ground cable, use an AC output cable that includes a ground cable instead of preparing an extra ground cable.
2	AC output power cable	35 mm ² outdoor copper cable	N/A
3	OT terminal	M8	When using outdoor copper cables for AC connection, select copper wiring terminals. For requirements on the cables and terminals of other materials, see the user manual.
4	DC input power cable	PV cable that meets the 1100 V standard	N/A
5	RS485 communications cable (terminal block)	Communications cable with a conductor cross-sectional area of 1 mm ² and outer diameter of 14–18 mm	<ul style="list-style-type: none">• If RS485 communication is used, prepare the RS485 communications cable.• A terminal block is recommended for connecting the RS485 communications cable.• If PLC communication is used, you do not have to prepare a communications cable because communication is implemented over the AC output power cable.
	RS485 communications cable (RJ45 network port)	CAT 5E outdoor shielded network cable with an outer diameter less than 9 mm and internal resistance not greater than 1.5 ohms/10 m, as well as shielded RJ45 connectors	
6	Solar tracker power cable (optional)	Dual-layer three-core outdoor copper cable with a conductor cross-sectional area of 4 mm ²	N/A
7	Cable tie	N/A	N/A

4.2 Installing the Ground Cable

NOTE

- The ground point on the enclosure is preferred to connect to the PE cable for the SUN2000.
- The ground point in the maintenance compartment is mainly used for connecting to the ground cable included in the multi-core AC power cable. For details, see section " 4.4 Installing AC Output Power Cables."
- The ground cable must be secured.
- It is recommended that PGND cable of the SUN2000 be connected to the nearest ground point. For a system with multiple SUN2000s connected in parallel, connect the ground points of all SUN2000s to ensure equipotential connections to ground cables.
- To enhance the corrosion resistance of the PE terminal, apply silica gel or paint on it after connecting the PGND cable.

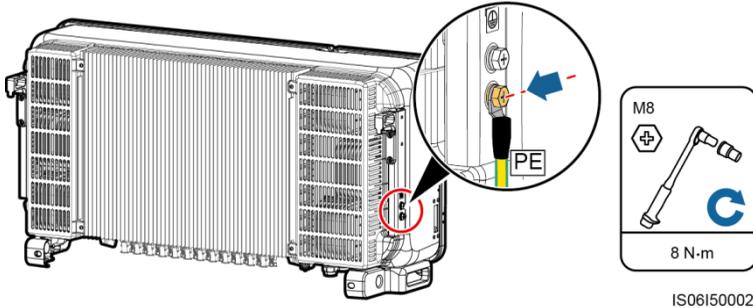


4.3 Opening the Maintenance Compartment Door

WARNING


- Never open the host panel of the SUN2000.
- Before opening the maintenance compartment door, turn off the downstream AC output switch and the two DC switches at the bottom.
- Do not open the maintenance compartment door in rainy or snowy days. If unavoidable, take protective measures to prevent rain or snow from entering the maintenance compartment.
- Do not leave unused screws in the maintenance compartment.

1. Loosen the two screws on the maintenance compartment door using a security torx wrench.
2. Open the maintenance compartment door and install the support bar.

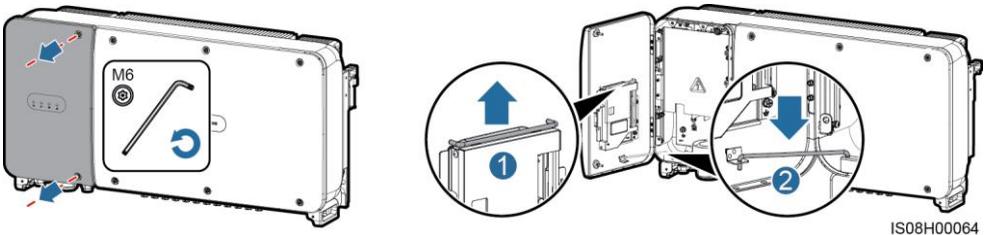


 **NOTE**

If the screws on the enclosure door are lost, obtain spare screws from the fitting bag bound to the inductor cover at the bottom of the enclosure.

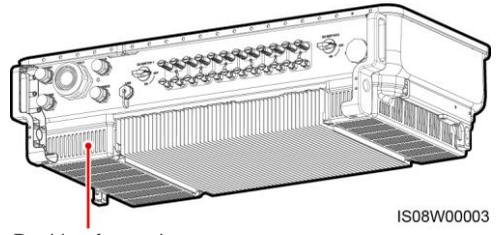

Position for saving spare screws

3. Remove the cover and hang it on the hook of the enclosure door.

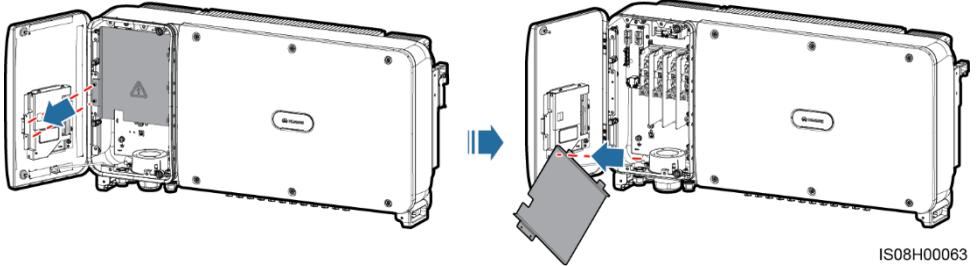

4.4 Installing AC Output Power Cables


 **NOTE**

- If you connect a ground cable to the ground point on the chassis shell in a scenario with no neutral wire, you are advised to use a three-core (L1, L2, and L3) outdoor cable.
- If you connect a ground cable to the ground point in the maintenance compartment in a scenario with no neutral wire, you are advised to use a four-core (L1, L2, L3, and PE) outdoor cable.
- If you connect a ground cable to the ground point on the chassis shell in a scenario with a neutral wire, you are advised to use a four-core (L1, L2, L3, and N) outdoor cable.
- If you connect a ground cable to the ground point in the maintenance compartment in a scenario with a neutral wire, you are advised to use a five-core (L1, L2, L3, N, and PE) outdoor cable.

1. Remove the locking cap from the AC OUTPUT connector and then remove the plug.
2. Route the cable through the cable gland.

 **NOTICE**


1. Select an appropriate rubber fitting based on the outer diameter of the AC power cable to ensure proper sealing.
2. To avoid damaging the rubber fitting, do not route a cable with a crimped OT terminal through the rubber fitting.
3. Do not adjust the cable when the thread-lock sealing nut is tightened. Otherwise, the rubber fitting will shift, which affects the Ingress Protection Rating of the device.

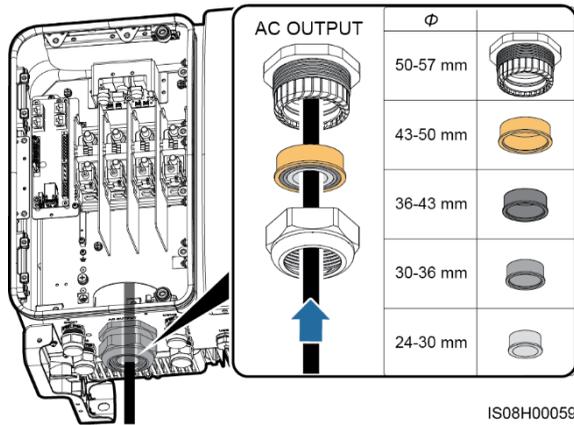


IS08H00059

3. Remove an appropriate length of the jacket and insulation layer from the AC output power cable using a wire stripper. (Ensure that the jacket is in the maintenance compartment.)


a. Three-core cable (excluding the ground cable and neutral wire)

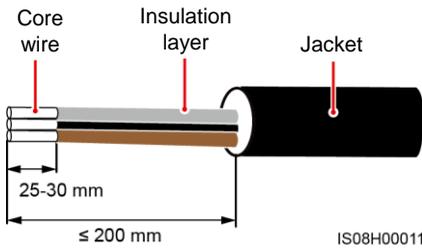


b. Four-core cable (including the ground cable but excluding the neutral wire)

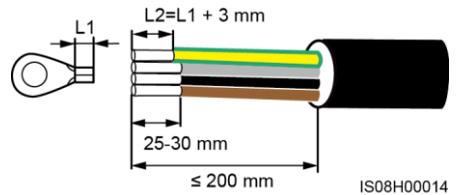

c. Four-core cable (excluding the ground cable but including the neutral wire)

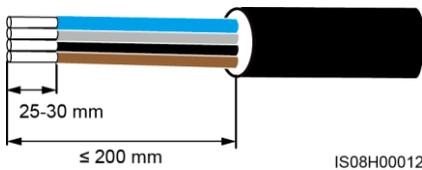


d. Five-core cable (including the ground cable and neutral wire)

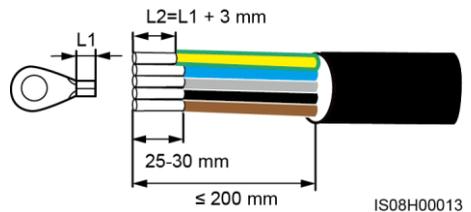

4. (Optional) Crimp an OT terminal on the PE cable.

 **NOTE**

Perform this step if the AC output power cable includes the ground cable.

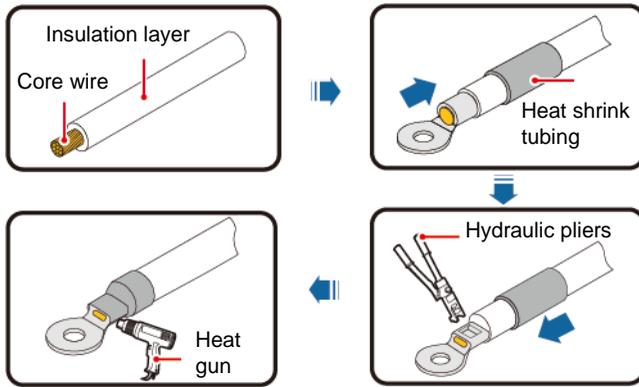


IS01Z00013

5. Connect the AC output power cable.

 **NOTICE**


- Ensure that AC terminations provide firm and solid electrical connections. Failing to do so may cause SUN2000 malfunction and damage to its terminal block, even starting thermal events.
- When connecting a PE cable, secure the screws using a socket wrench with an extension wrench longer than 200 mm.
- If the AC output power cables are subject to a pulling force because the inverter is not installed stably, ensure that the last cable that bears the stress is the PE cable.

Ensure that the AC output power cable and cable connector are in good contact.

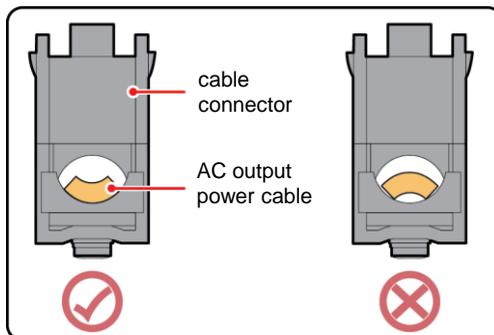


IS07W00024

a. Three-core cable (excluding the ground cable and neutral wire)

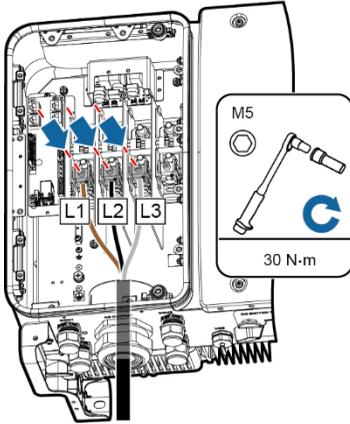


b. Four-core cable (including the ground cable but excluding the neutral wire)

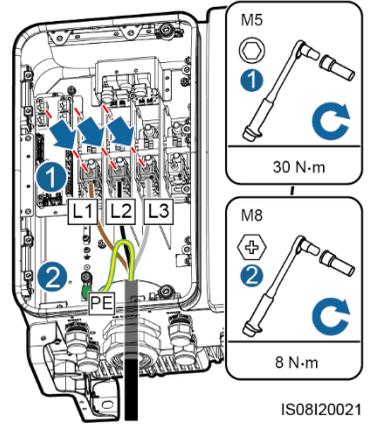


IS08I20021

c. Four-core cable (excluding the ground cable but including the neutral wire)

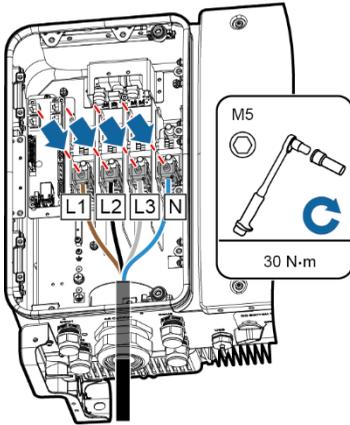

d. Five-core cable (including the ground cable and neutral wire)

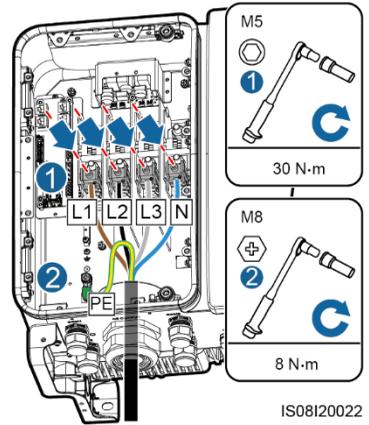


IS08I20022

6. Tighten the thread-lock sealing nut.
7. Clear debris from the maintenance compartment.

4.5 Installing DC Input Power Cables

Selecting DC Input Terminals

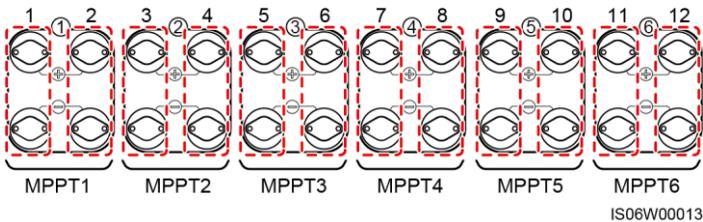

NOTE

The SUN2000 provides two DC switches, named as DC SWITCH 1 and DC SWITCH 2. DC SWITCH 1 controls the 1st to 6th sets of DC input terminals, whereas DC SWITCH 2 controls the 7th to 12th sets of DC input terminals.

Select DC input terminals according to the following rules:

1. Evenly distribute DC input power cables on the DC input terminals controlled by the two DC switches.
2. Maximize the number of connected MPPT circuits.







WARNING

Ensure that the PV module output is well insulated to ground.

NOTICE







1. Use the Amphenol Helios H4 PV connectors provided with the SUN2000. If the terminals are lost or damaged, purchase the PV connectors of the same model. The device damaged caused by incompatible PV connectors is not covered under any warranty or service agreement.
2. The metal terminals supplied with the Amphenol Helios H4 solar connectors are either cold forming or stamping forming contacts.
3. Before connecting DC input power cables, label the cable polarities to ensure correct cable connections. If the cables are connected incorrectly, the SUN2000 may be damaged.
4. Insert the crimped metal terminals of the positive and negative power cables into the appropriate positive and negative connectors. Then pull the DC input power cables to ensure that they are connected securely.
5. Connect the positive and negative connectors to the appropriate positive and negative DC input terminals. Then pull the DC input power cables to ensure that they are connected securely.
6. If polarity of the DC input power cable is reversed and the DC switch is ON, do not turn off the DC switch immediately or unplug positive and negative connectors. The device may be damaged if you do not follow the instruction. The caused equipment damage is beyond the warranty scope. Wait until the solar irradiance declines and the PV string current reduces to below 0.5 A, and then turn off the two DC switches and remove the positive and negative connectors. Correct the string polarity before reconnecting the string to the SUN2000.

Installing DC Input Power Cables (Cold Forming Metal Contact)

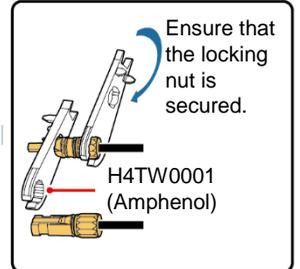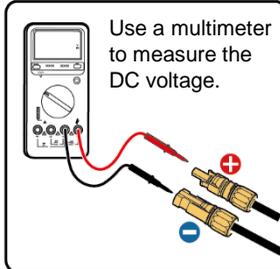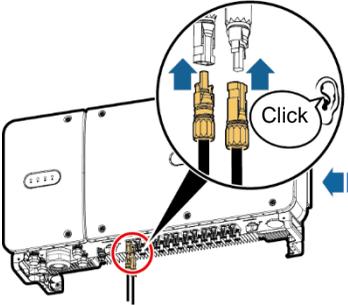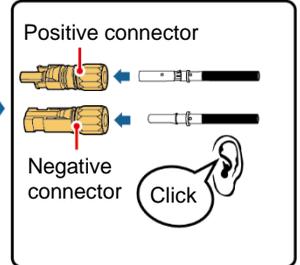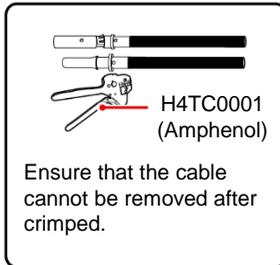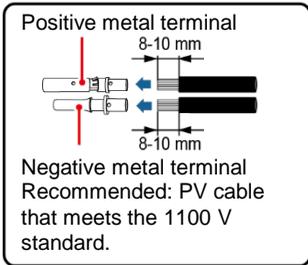

IS08I30001

Installing DC Input Power Cables (Stamping Forming Metal Contact)

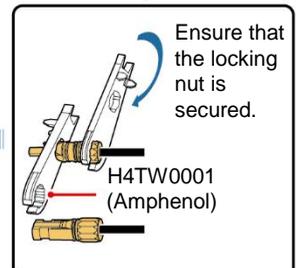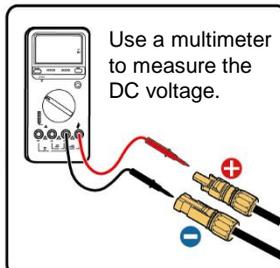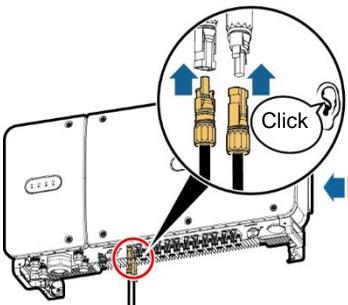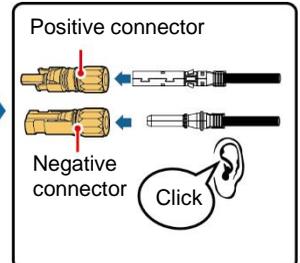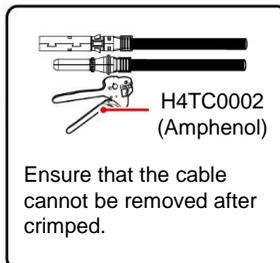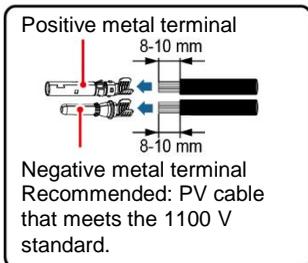

IS08I30003

⚠ NOTICE

- If the voltage is a negative value, the DC input polarity is incorrect. Correct the polarity.
- If the voltage is greater than 1100 V DC, too many PV modules are configured to the same string. Remove some PV modules.

4.6 Selecting a Communication Mode

The SUN2000 supports PLC and RS485 communication modes, but only one communication mode can be selected at the time of setup.

NOTE

- If PLC is used, you do not have to connect any communications cable to the SUN2000, but have to connect the PLC CCO module or SmartLogger2000 to the AC power cable. For detailed operations, see the *PLC CCO01A User Manual* or *SmartLogger2000 User Manual*.
- If RS485 is used, do not connect the PLC CCO module to the AC power cable or connect the AC power cable for the SmartLogger2000.


4.7 Installing the RS485 Communications Cable

NOTICE


- When routing communications cables, separate communications cables from power cables to prevent communication from being affected.
- An RS485 cable can connect to either a terminal block or an RJ45 network port. It is recommended that the RS485 cable connect to a terminal block.

Terminal Block Connection (Recommended)


1. Remove an appropriate length of the jacket and core wire insulation layer from the communications cable using a wire stripper.

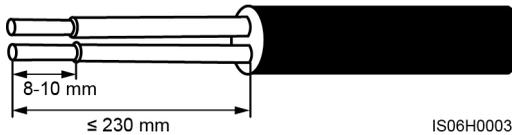

2. Route the cable through the cable gland.

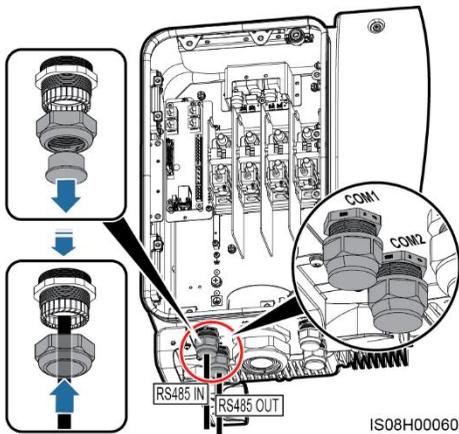


3. Remove the cable terminal base from the terminal block. Connect the communications cable to the terminal base.

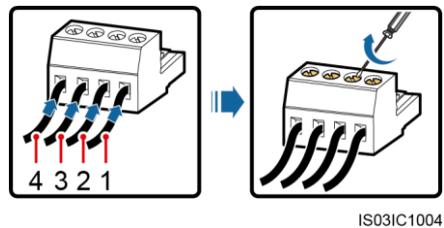


No.	Port Definition	Description
1	RS485A IN	RS485A, RS485 differential signal+
2	RS485A OUT	RS485A, RS485 differential signal+
3	RS485B IN	RS485B, RS485 differential signal-
4	RS485B OUT	RS485B, RS485 differential signal-

4. Install the terminal base on the terminal block, and connect the shield layer to the ground point.

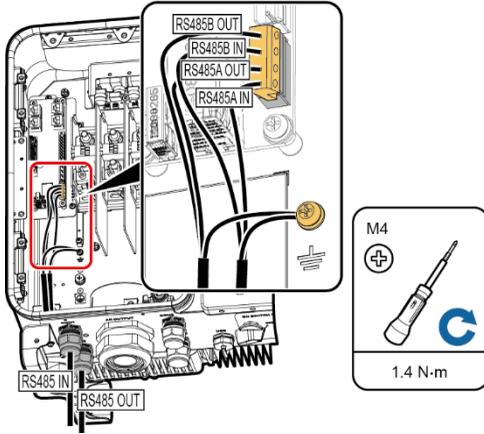

5. Bind the communications cable.

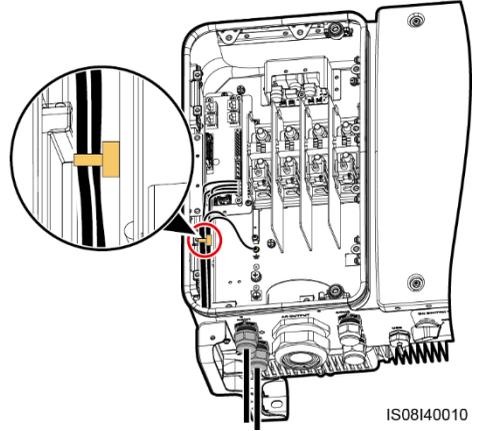

IS08140010




NOTE

- When connecting the shielded cable, choose whether to crimp the OT terminal based on site requirements.
- Tie the communication cables with the cables on internal side of the maintenance compartment.

6. Tighten the thread-lock sealing nut and seal the waterproof connector.

RJ45 Network Port Connection


1. Prepare an RJ45 connector.

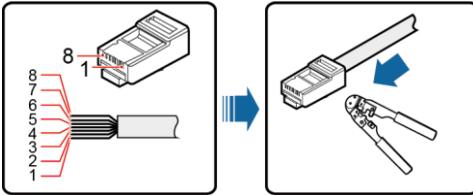

IS01Z00009

No.	Color	Pin Definition
1	White-and-orange	RS485A, RS485 differential signal+
2	Orange	RS485B, RS485 differential signal-
3	White-and-green	N/A
4	Blue	RS485A, RS485 differential signal+
5	White-and-blue	RS485B, RS485 differential signal-
6	Green	N/A
7	White-and-brown	N/A
8	Brown	N/A


2. Route the cable through the cable gland.

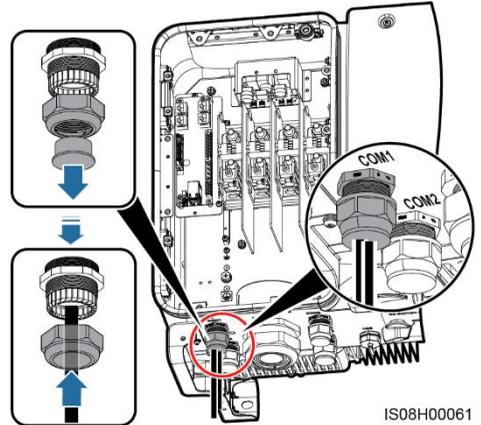

IS08H00061

3. Insert the RJ45 connector into the RJ45 network port in the SUN2000 maintenance compartment.

4. Bind the communications cable.

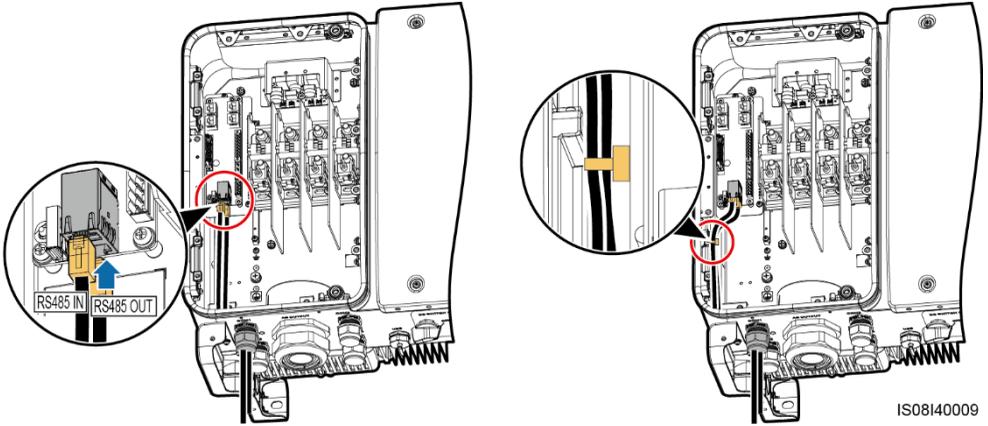

NOTE

Tie the communication cables with the cables on internal side of the maintenance compartment.

5. Tighten the thread-lock sealing nut and seal the waterproof connector.

4.8 (Optional) Installing the Solar Tracker Power Cable



NOTICE


1. A switch-disconnector-fuse or fuse-switch-disconnector with a voltage of no less than 500 V, current of 16 A, and protection type of gM needs to be installed between the SUN2000 and the tracker controller for protection.
2. The cable between the wiring terminal on the power cable and the switch-disconnector-fuse or fuse-switch-disconnector should be less than or equal to 2.5 meters.




WARNING

Do not place flammable materials around the cable.


1. Remove an appropriate length of the jacket and insulation layer from the solar tracker power cable using a wire stripper. (Ensure that the jacket is in the maintenance compartment.)

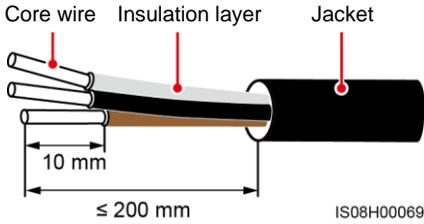


2. Route the cable through the cable gland.

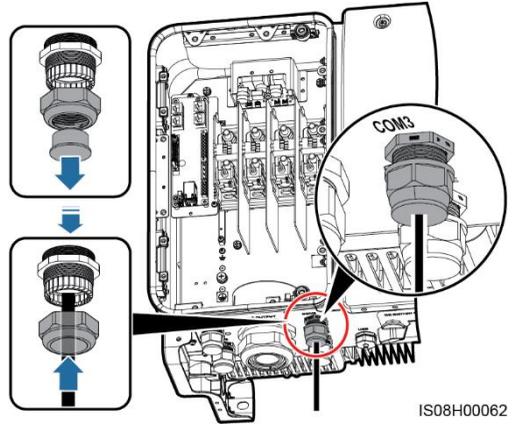

3. Loosen the minus screw on the cable connector, and connect the solar tracker power cable.

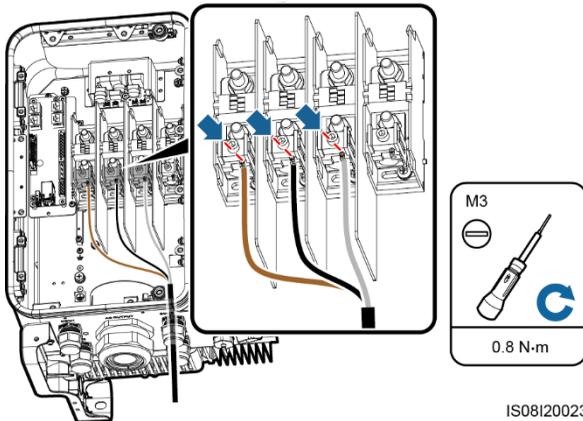

4. Bind the solar tracker power cable.

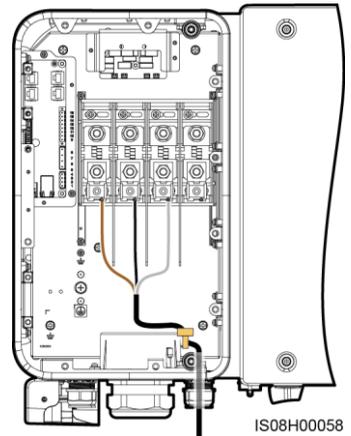

5. Tighten the thread-lock sealing nut and seal the waterproof connector.

5 Verifying the Installation

1. The SUN2000 is installed correctly and securely.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
2. The DC switches and downstream AC switch are OFF.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
3. All ground cables are connected securely, without open circuits or short circuits.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
4. AC output power cables are connected correctly and securely, without open circuits or short circuits.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
5. DC input power cables are connected correctly and securely, without open circuits or short circuits.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
6. The RS485 communications cable is connected correctly and securely.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
7. Check that all used cable glands at the bottom of the enclosure are sealed, and that the thread-lock sealing nut is tightened.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
8. The AC terminal cover is reinstalled.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
9. The maintenance compartment door is closed and the door screws are tightened.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
10. Unused DC input terminals are sealed.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
11. Unused USB ports are plugged with watertight caps.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>
12. Unused cable glands are plugged and the thread-lock sealing nuts are tightened.	Yes <input type="checkbox"/> No <input type="checkbox"/> N/A <input type="checkbox"/>

6 Powering On the System

NOTICE

Before turning on the AC switch between the SUN2000 and the power grid, use a multimeter to check that the AC voltage is within the specified range.


1. Turn on the AC switch between the SUN2000 and the power grid.
2. Turn on the DC switches at the SUN2000 bottom.

7 SUN2000 App

NOTE


1. The SUN2000 app enables the SUN2000 to communicate with the monitoring system through a USB data cable or Bluetooth for you to query alarms, configure parameters, and perform routine maintenance. The SUN2000 app is a convenient platform for local monitoring and maintenance. The app name is SUN2000.
2. Mobile phone operating system: Android 4.0 or later, iOS 7.0 or later. When the iOS is used, the app supports only Bluetooth connection.
3. Access the Huawei app store (<http://appstore.huawei.com>), **Google Play** (<https://play.google.com>), or **App Store** (iOS), search for **SUN2000**, and download the SUN2000 app software package.
4. Connect a USB data cable or a Bluetooth module to the USB port of the SUN2000 to enable the communication between the SUN2000 and the app.

Connection over a Bluetooth Module

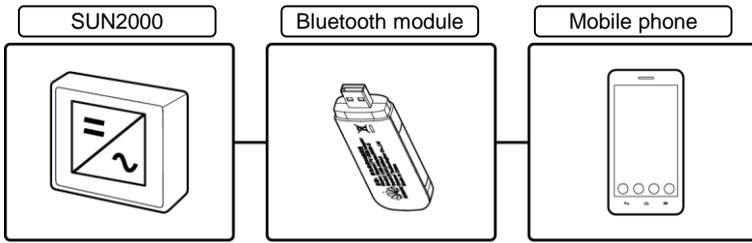


IS01NC0009

Data Cable Connection

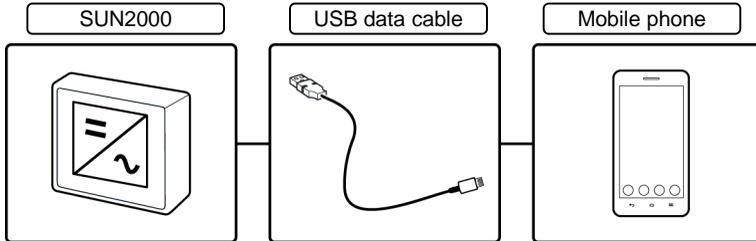


IS01NC0010

Login screen

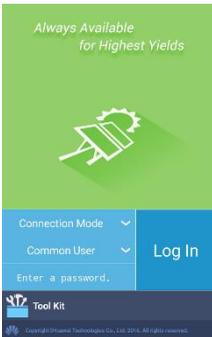


Selecting a connection mode

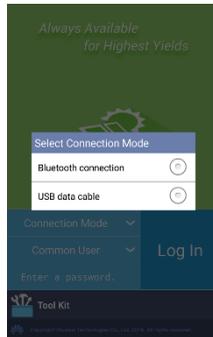

Connecting Bluetooth




Switching between users

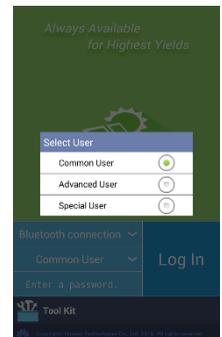

Quick settings



Main menu screen

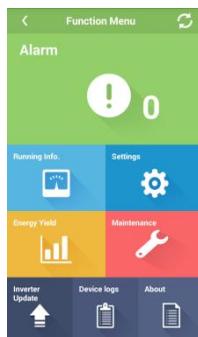

NOTICE

- The preset passwords for **Common User**, **Advanced User**, and **Special User** are **00000a**.
- Use the preset password upon initial login. To ensure account security, change the password immediately after login.
- The screenshots in this document correspond to app 2.2.00 (Android).

NOTE

Set the correct grid code based on the application region and scenario of the SUN2000.

