

Set alarm notification on FusionSolar



Huawei Technologies Co. Ltd.

Version	Created by	Date	Remarks
01	Huawei e84081311	28.02.2019	Alarm notification


The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are a number of factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. Huawei may change the information at any time without notice.




This document describes how to set alarm notification.

Procedure

1. On the system homepage, click **Settings** to go to the **System Setting** interface.

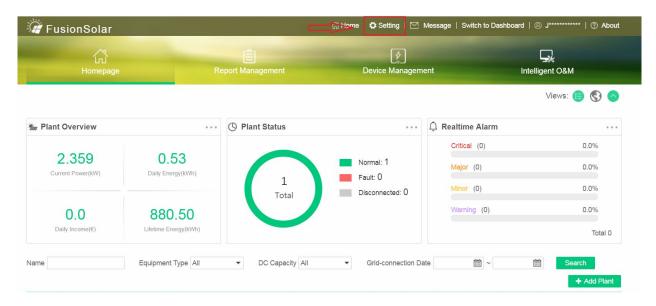


- 2. Click **Parameter Setting** in the navigation bar on the left. By default, **Parameter Table Setting** will be opened.
- 3. Click **Notification Setting and select New template**. The organization structure and alarm template list will be displayed in the interface.

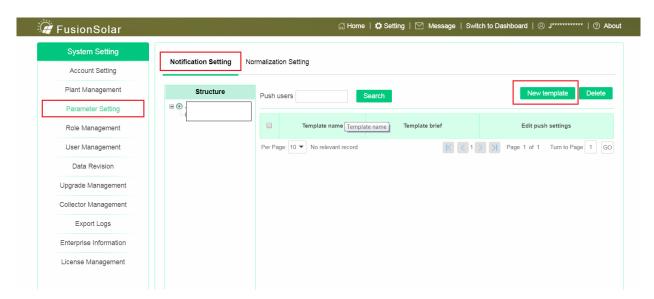




4. In the **Push settings** set the template name, select the device type and search. From the display alarms you can choose what alarms you want to receive or you can select all. Set the application range, and click **Next**

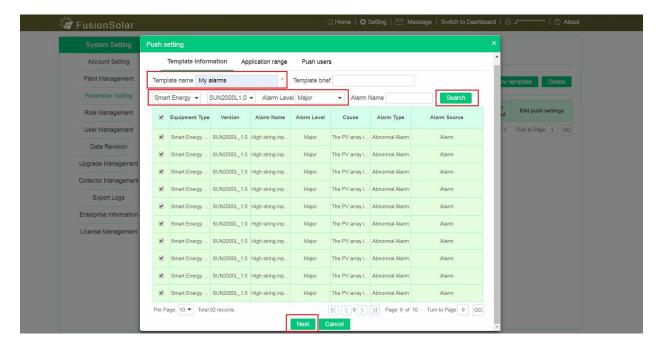


5. Select the plant and click **Next**

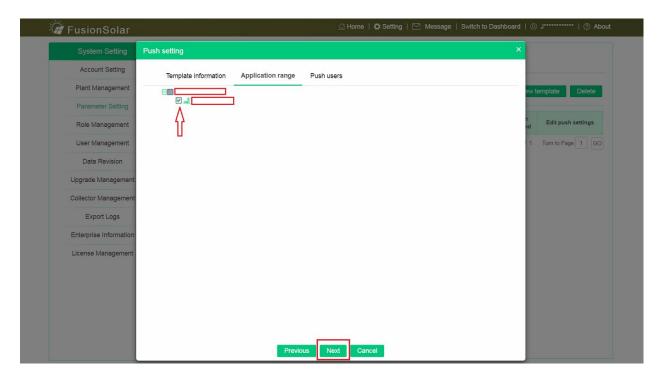





6. Click in the user tab to select the user/s that you want to receive the alarm notification. If you want to add more rules for this plant select **Add**

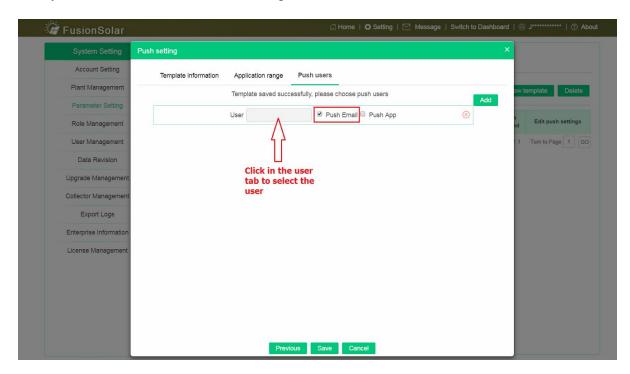

7. Confirm the user to receive notification alarm and Save

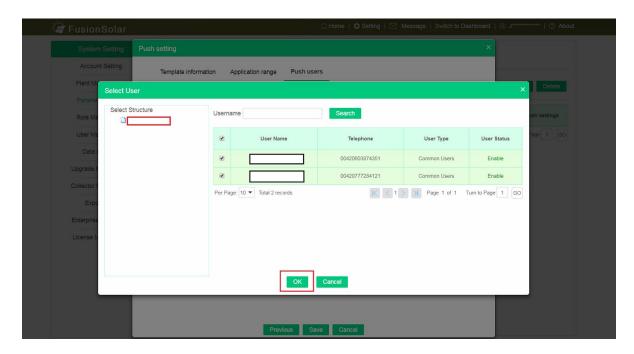




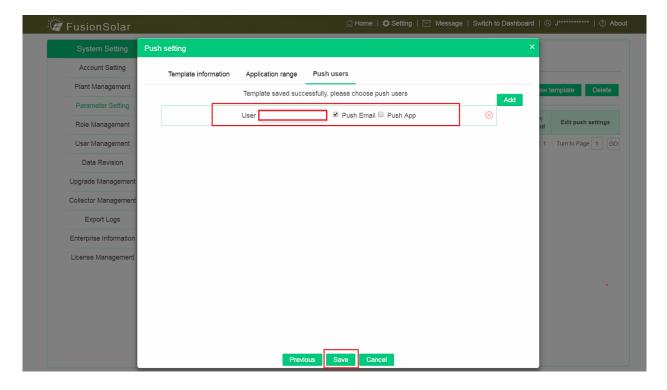

8. Modify or delete the alarm notification

- Modify Alarm Pushing
 - a. In the alarm template list, click **Modify** to edit push settings, and the **Notification Setting** dialog box is displayed.
 - b. Modify the template information, application range and push users according to the actual situation.
 - c. Click **Save** to get the prompt dialog box popped up.
 - d. Click **OK**. The modification is completed.
- Cancel Alarm Pushing
 - a. In alarm template list, select the alarm template to be delete (multiple), and click **Delete** to get the prompt dialog box popped up.
 - b. Click **OK** to delete.



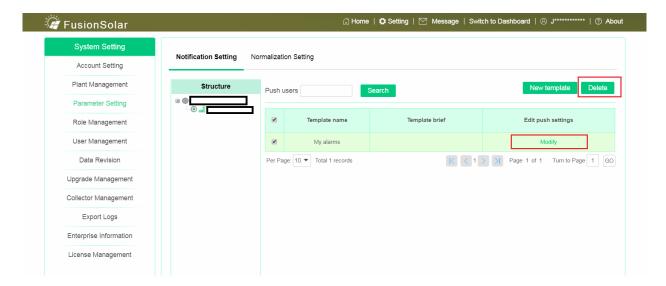

If the notification setting is not available in your installer account please contact the service team to enable for you at: eu inverter support@huawei.com.