

How to export logs file from SUN2000L inverter



Huawei Technologies Co. Ltd.



Version	Created by	Date	Remarks
03	Huawei e84081311	10.12.2018	Initial version created

The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are a number of factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. Huawei may change the information at any time without notice.


The way of downloading all logs is the same as the way of downloading fault logs. This section describes how to download all logs.

Procedure:

Step 1 Login as “installer” on Fusion-Home application with the default password “00000a”

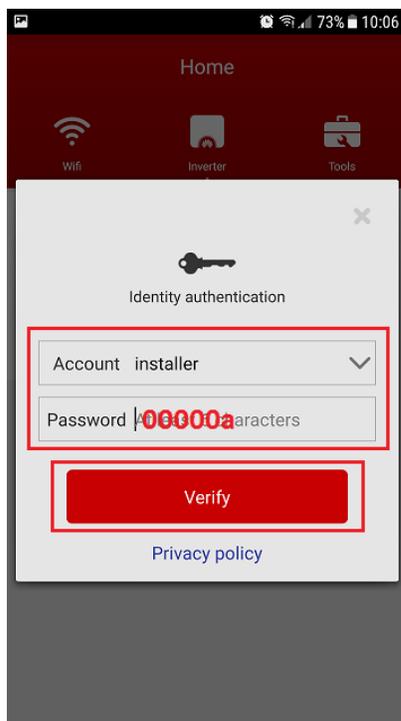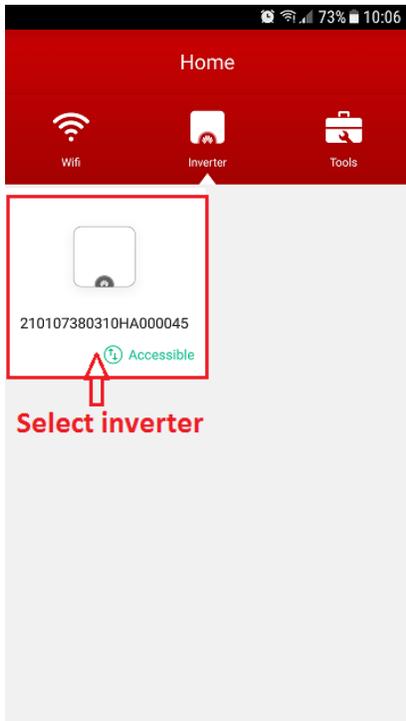

Step 2 From the Home page screen, choose “**Log management**” to access the **Download logs**, select inverter all logs (if you want Battery logs or APP logs select also this) and **Download**

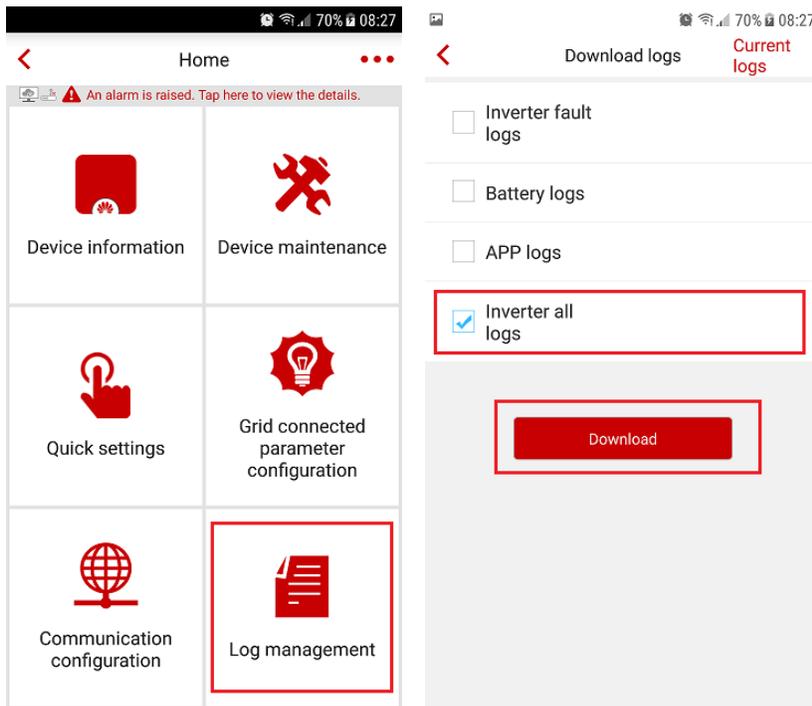

Step 3 After logs are downloaded, choose “**CONFIRM**” and the logs will be saved in your phone. Or you can choose “**SHARE**” to send the logs file to service team at email: eu_inverter_support@huawei.com.

The logs file will be saved like you can see below in:
My Files→Storage→FusionHome→InverterLog.

