





1. Quick setting on FusionHome app

FusionHome


1 login as Installer.
The initial password is 00000a.

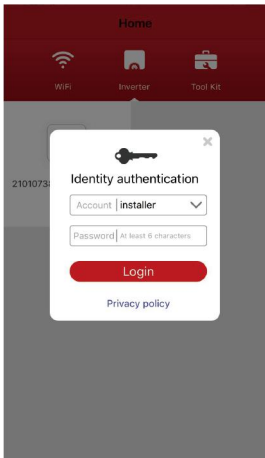


2 Tap Quick setting.

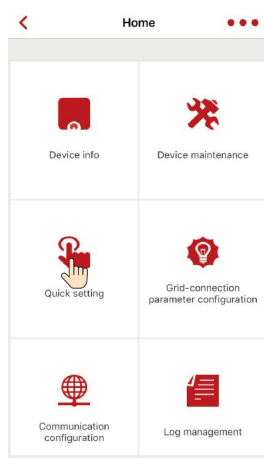


3 Tap Quick setting.

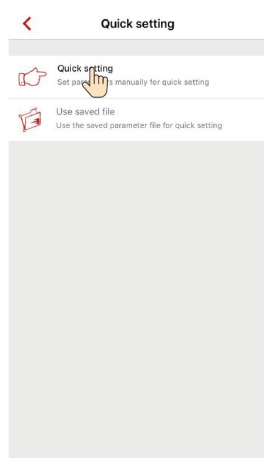


4 Set router parameters and after confirm switch the phone to the router WiFi.

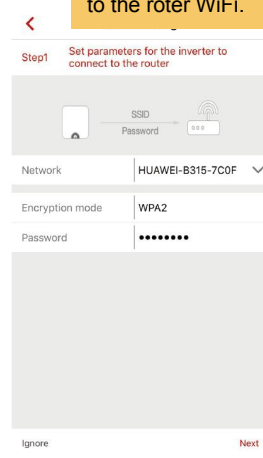

5 Set the grid code of the region.

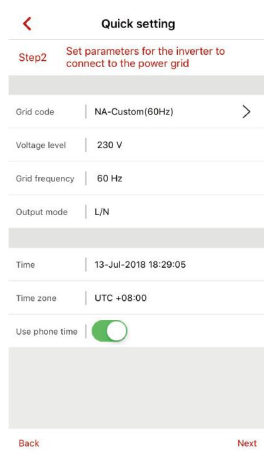


6 Add the power meter.

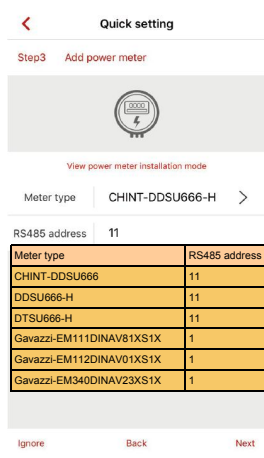


Meter type	RS485 address
CHINT-DDSU666	11
BDSU666-H	11
DTSU666-H	11
Gavazzi-EM111DINAV81XS1X	1
Gavazzi-EM112DINAV01XS1X	1
Gavazzi-EM340DINAV23XS1X	1


7 Add the battery.

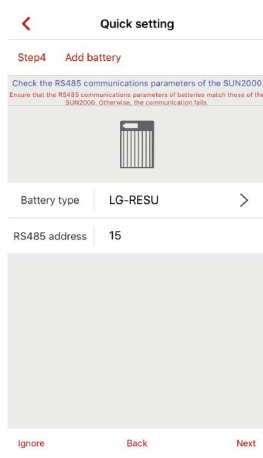

8 Inverter self-check.

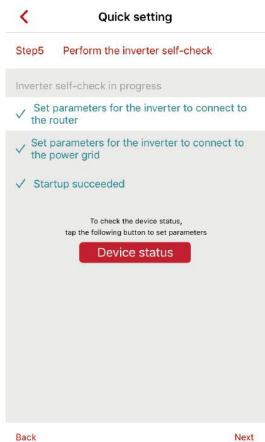


9 Set the management system domain name of the region.

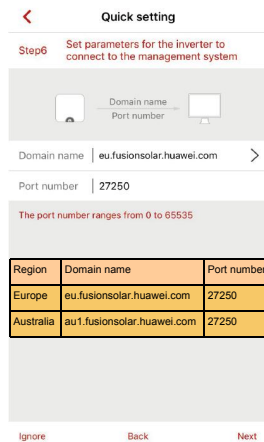


Region	Domain name	Port number
Europe	eu.fusionsolar.huawei.com	27250
Australia	au1.fusionsolar.huawei.com	27250


10 Connect the server of the management system.

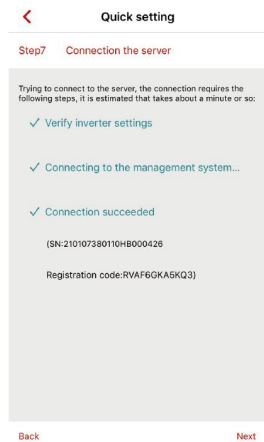


11 This step is for installer who have registered the management system.

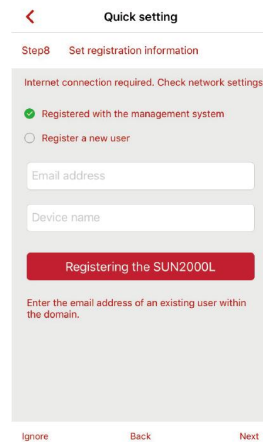


12 This step is for installer who have not registered the management system.

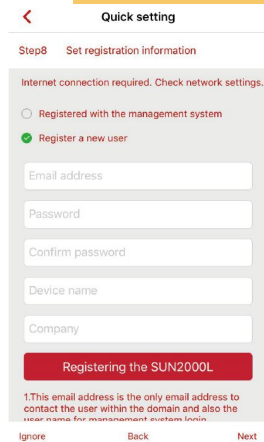

13 Management system registration is successful.

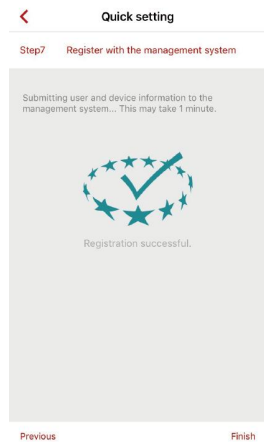

14 Quick setting successful.

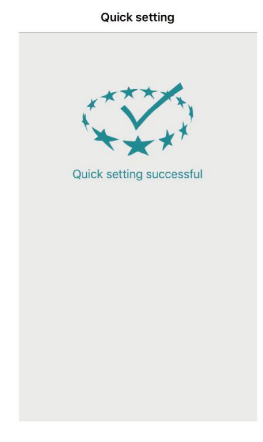




2. Connect devices to the NetEco residential system

NetEco


1 Log in to the NetEco app as installer.

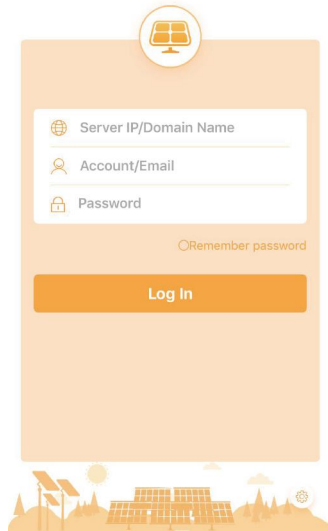


2 Go to the Select Device page.




3 Select a target device in the device list, and tap Next.

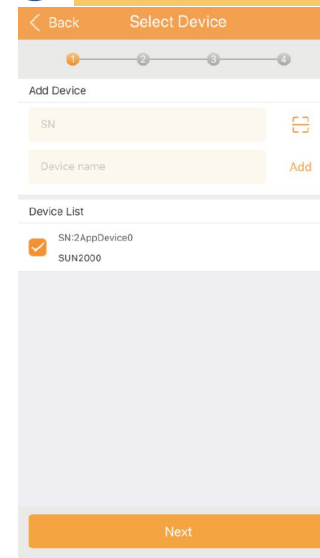

4 Set the device information, and tap Add to New PV Plant.

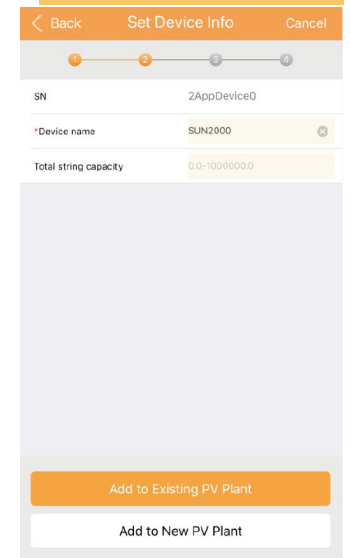

5 Set PV plant parameters and tap Next.

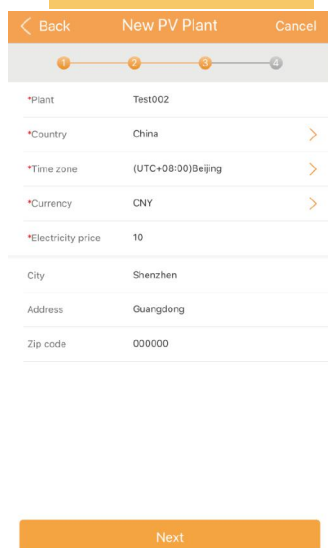

6 The Configuration Successful page is displayed. Click Finish.

Basic Information	
Plant	Test002
Country	China
Time zone	(UTC+08:00)Beijing
Currency	CNY
Electricity price	10.0000
City	Shenzhen
Address	Guangdong
Zip code	000000
Device Information	
Device name	Total string capacity
SUN2000	

