





1. Quick setting on FusionHome app

FusionHome


1 login as Installer.
The initial password is 00000a.

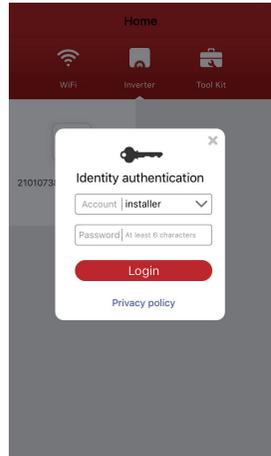


2 Tap Quick setting.

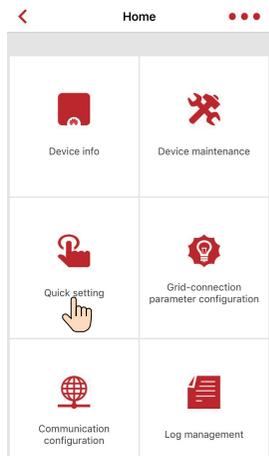


3 Tap Quick setting.

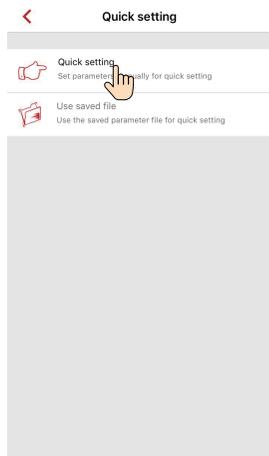

4 Set router parameters.

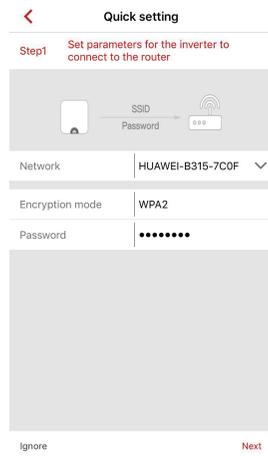


5 Set the grid code of the region.

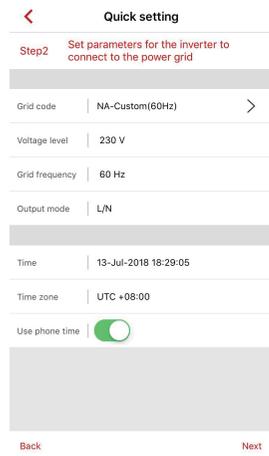


6 Add the power meter.




7 Add the battery.

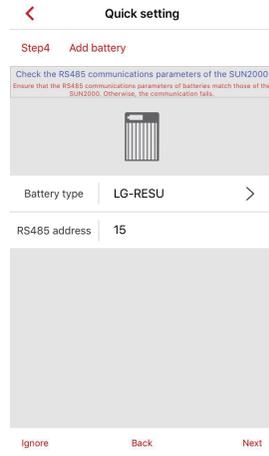


8 Inverter self-check.

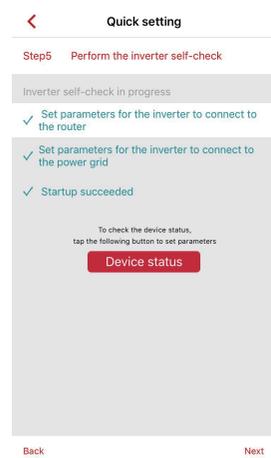


9 Set the management system domain name of the region.

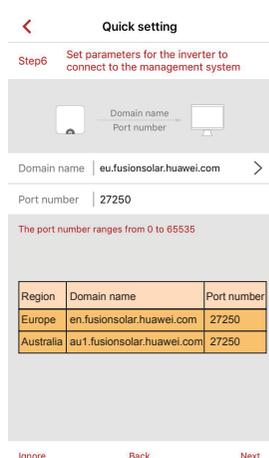


10 Connect the server of the management system.

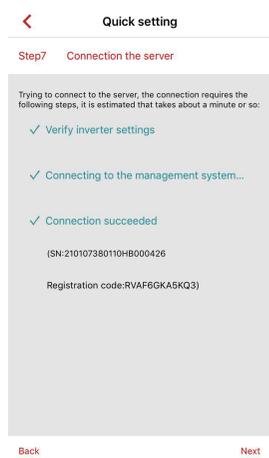


11 This step is for installer who have registered the management system.

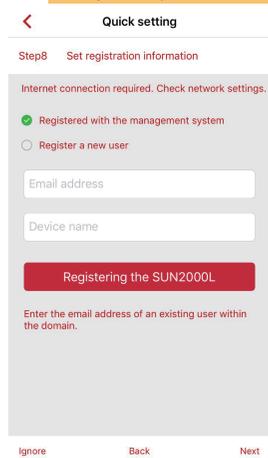


12 This step is for installer who have not registered the management system.

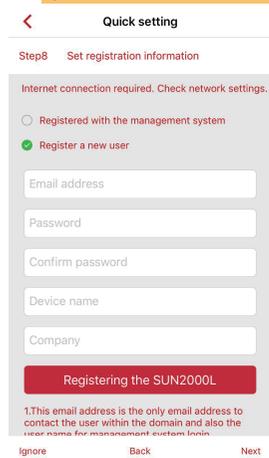

13 Management system registration is successful.

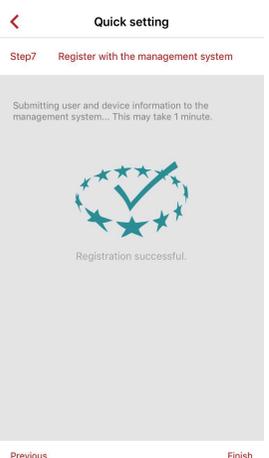

14 Quick setting successful.

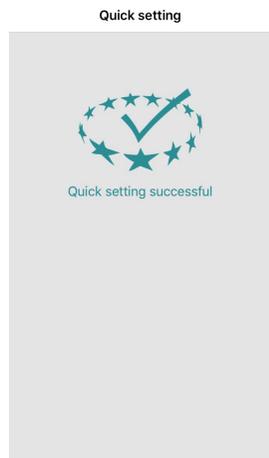



2. Connect devices to the NetEco residential system so as to manage them through the NetEco.

1 Log in to the NetEco residential system as installer.
In the displayed Device Settings > Select Devices dialog box, select the target device and click Next.

2 Select Create PV Plant.

3 Set PV plant parameters, and click Next.

Device Settings

Selecting Devices

The following devices connected to the management system are not configured yet. Select devices that belong to the same PV plant and configure them.

<input type="checkbox"/>	Device Name	SN
<input checked="" type="checkbox"/>	SUN2000	2T1ShiAlarm0

Next Cancel

Device Settings

Setting PV Plants

Create PV Plant
Create a PV plant for adding devices.

Select PV Plants
Select an existing PV plant for adding devices.

Device Settings

Create PV Plant

* PV plant name:

* Country: City:

* Time Zone: (UTC+08:00)Taipei Address:

* Currency: CNY Zip code:

* Electricity price: 0.0000-99.9999 PV Plant Image: Upload

PV plant description:

Previous Next Cancel

4 Set the device information and click Next.

5 The device is successfully added to the new PV plant.

Device Settings

Setting Device Information

* Device Name x SN Total String Capacity(Wp)

Previous Next Cancel

Device Settings

Configuration Successful

PV Plant Information

PV plant name:Plant01 Time Zone:(UTC-08:00)Pacific Standard Time
Country:Canada Zip Code:
City: Electricity Price:1
Address: Currency:AUD

Device Information

Device Name	Total String Capacity(Wp)	Grid Standards Code
A2		NB/T 32004

There are devices not configured. You can tap Continue to configure them or tap Finish to close the configuration.

Finish Continue



3. Adding Users

- 1 Login as installer. Choose System > User Management > Add User, and click Create User.

User Name	User Type	PV Plant	Email address
installer001	Installer	Plant001	asd****@wejf.com

- 2 Set the user parameters and click OK.

*User Name:

*Password:

*Confirm password:

*Email Address:

User type:

A customer can only access the Overview page.

Use status: Enable Disable

Email password: Yes No

Company:

Select a PV plant that can be accessed:

- PV System
- Plant001
- plant002

- 3 The added user is displayed in the user list.

User Name	User Type	PV Plant	Email address
installer001	Installer	Plant001;plant001s	a****@wejf.com
customer001	Customer	plant001s	s****@sdf.com